
# IDYNAMO 6 CARTRIDGE

# **IDYNAMO 6**

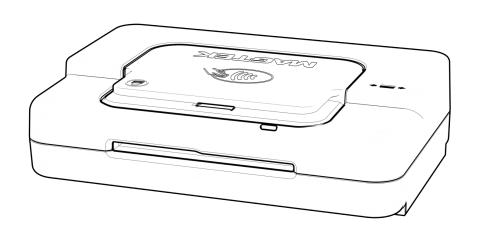

Rev B CNX2-ID6

#### **CONTENTS**

What's	Included	۱.			•	•			•	•	•		
Assemb	oly												3
Disasse	embly											:	13

#### WHAT'S INCLUDED

D:1







Cartridge Screw 4-40 x 1/2" (4)

Cartridge Bottom (1)


D:3



Cartridge Top (1)

Remove the Screws (D:1) from the Cartridge Bottom (D:2).


### **ASSEMBLY**

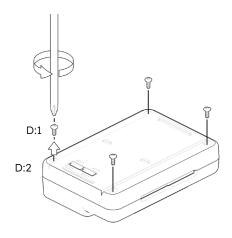


#### **ASSEMBLY**

2 Open the

Open the Reader Cartridge. Place the iDynamo 6 in the Cartridge Bottom (D:2).

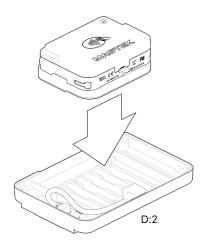


Plug the USB-C female cable onto the iDynamo 6 male connector. Place the Cartridge Top (D:3) back on.

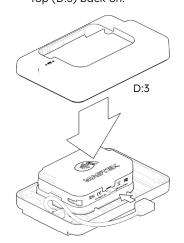

#### **ASSEMBLY**




Tighten the Screws (D:1) into the Cartridge Bottom (D:2).

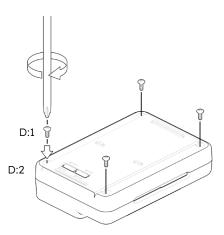

Push on plate wh

 
Push on the back of the NOCC plate while lifting the front to remove it from the Sled (B).



#### **ASSEMBLY**

- - Place the feet of the Cartridge Bottom (D:2) straight down into the slots on the Sled (B) top.
  - D:2 В

Push on the front of the Reader Cartridge until you feel a click.

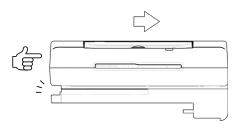

#### **Attention**

To continue the assembly process, please refer to the Get Started instruction booklet.

#### **Attention**

#### **Attention**

## **DISASSEMBLY**


Please refer to the Get Started instruction booklet to begin disassembly.


**Attention** 

#### **DISASSEMBLY**

Push on the back of the Reader Cartridge until you feel a click.


Pull the Reader Cartridge straight up to release.

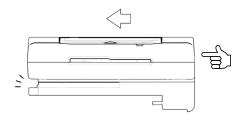

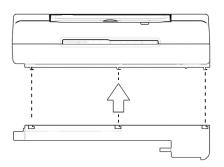

#### **DISASSEMBLY**

Remove the Screws (D:1) from the Cartridge Bottom (D:2).

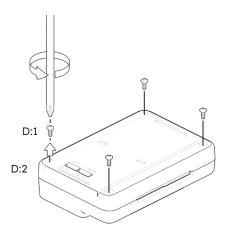

Open the Reader Cartridge, unplug the iDynamo 6, and remove the card reader.

