 


PARTS INCLUDED

A


PRO-UNI33 Bracket
(1)

B



#10-32 x 1/4" Pan Head Screws
(2)

C



Double Sided Adhesive Pads
(2)

ASSEMBLY


1. Make sure the Pro Enclosure cable is plugged into the tablet and routed through the back of the Pro Enclosure.

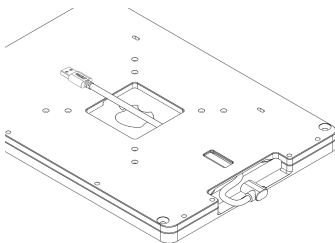


2. Route the card reader charging cable (purchased separately) through the back of the Pro Enclosure.

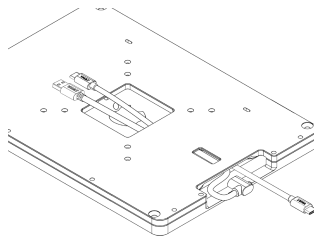


3. Screw the Universal Bracket (A) into the Pro Enclosure using the two #10-32 x 1/4" Pan Head Screws (B).

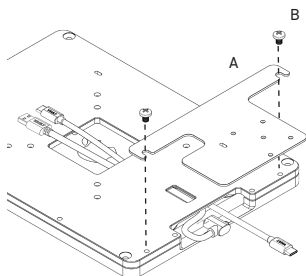

4. Peel off the film from one side of the Double Sided Adhesive pads (C) and apply them to the Universal Bracket (A).

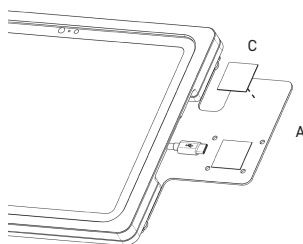

5. Plug the charging cable coming from the side of the Pro Enclosure card reader into the card reader. Remove the second side of film from the Double Sided Adhesive and press the card reader onto it firmly.

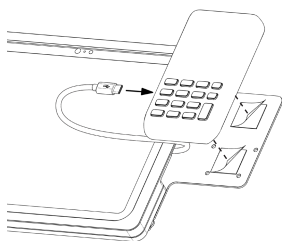

REFER TO TABLET ENCLOSURE INSTRUCTIONS TO
FINISH YOUR SOLUTIONS ASSEMBLY

