
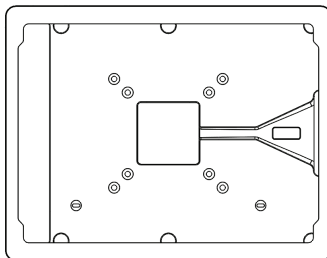
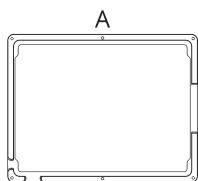
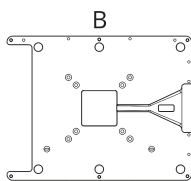


11" Enclosure

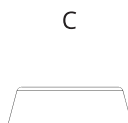

12.9" Enclosure

## PARTS INCLUDED


 Faceplate  
(1)

 Backplate  
(1)

 Rubber Spacer  
(6)

### PRO-IP11 ENCLOSURE HARDWARE PACK


 10-32x1/2  
Flat Head  
(4)

 6-32x1/2  
Flat Head  
(2)

### PRO-IP12 ENCLOSURE HARDWARE PACK


 10-32x1/2  
Flat Head  
(6)

## PREASSEMBLY

Insert rubber spacer into specified locations.

12.9" iPad Pro

11" iPad Pro - Place in location 2



10.9" iPad Air - Place in location 2

10.9" iPad (10th Gen) - Place in location 2

10.5" iPad Pro - Place in location 2

10.2" iPad (9th Gen) - Place in location 1


Route cabling through access holes in the back plate.

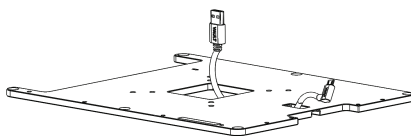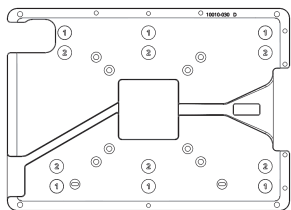

\* If REPEL is installed on 10.2" iPad don't use spacers.


## 1. PLACE TABLET INTO FACE PLATE

Ensure that PREASSEMBLY steps have been followed concerning the rubber spacers.

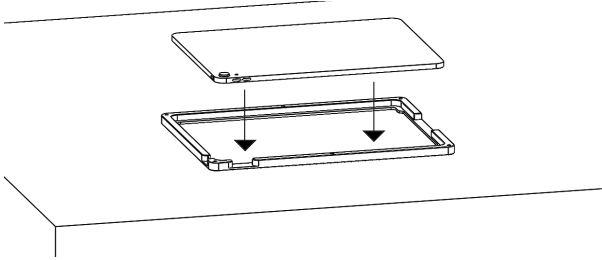

## 2. PLACE BACKPLATE OVER THE FACEPLATE AND INSERT SCREWS

Refer to base mounting instructions before proceeding with this step if you are using a VESA mounted base.

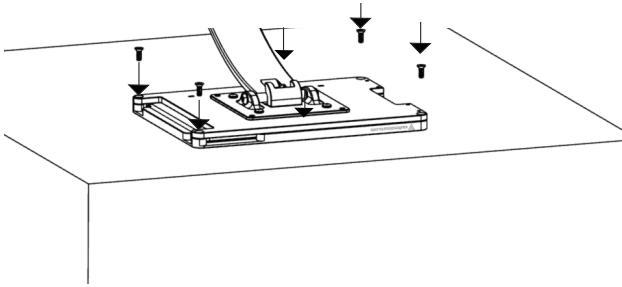

REFER TO CREDIT CARD BRACKET INSTRUCTIONS  
TO FINISH YOUR SOLUTIONS ASSEMBLY (OPTIONAL)

