

For the latest instructions scan the above QR code or visit

vaultenclosures.com/instructions

PARTS INCLUDED

[a]



10-32 3/4"
Flat Head
(4)


[b]




10-32 5/8"
Socket Head
(4)

1. ATTACH ENCLOSURE TO RCD


FOR CONNECT

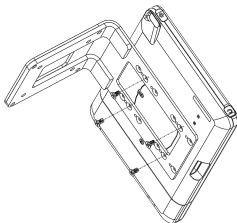

FOR PRO

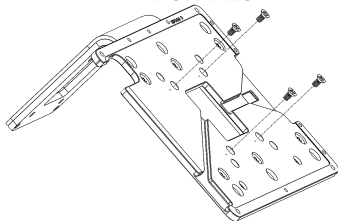

Use 10-32 3/8" Flat Head screws provided with STABILITY Base for attaching enclosures. Refer Table [1] for mounting locations

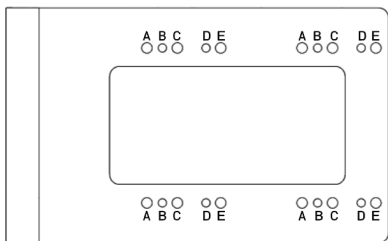


Mounting locations

CNX IP10	A
PRO IP11	B
CNX MINI	C
PRO IP12	D
CNX MINI*	E

Table [1] * portrait mode

2. ROUTE CABLE

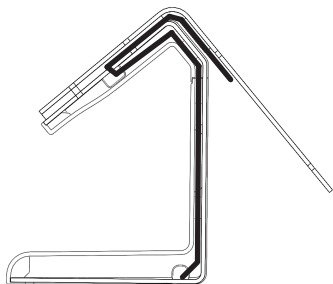

Route cable into the wire management of STABILITY Base as shown in the figure



3. ATTACH ENCLOSURE & RCD TO STABILITY

Refer to STABILITY Base assembly instructions to attach enclosure and RCD to STABILITY Base. Use 10-32 5/8" Socket Head screws [b] and 10-32 3/4" Flat Heat screws [a] for Connect and Pro enclosures respectively

REFER TO TABLET ENCLOSURE INSTRUCTIONS
TO FINISH YOUR SOLUTIONS ASSEMBLY

